


1 2 3 4 5 6

**重点
校对项**

- 1. 版面尺寸
- 2. 材质标注
- 3. 物料编码
- 4. 颜色标注
- 5. 客户型号
- 6. 产品名称
- 7. 重量标注
- 8. 电压功率

项目	
库	
文件名	

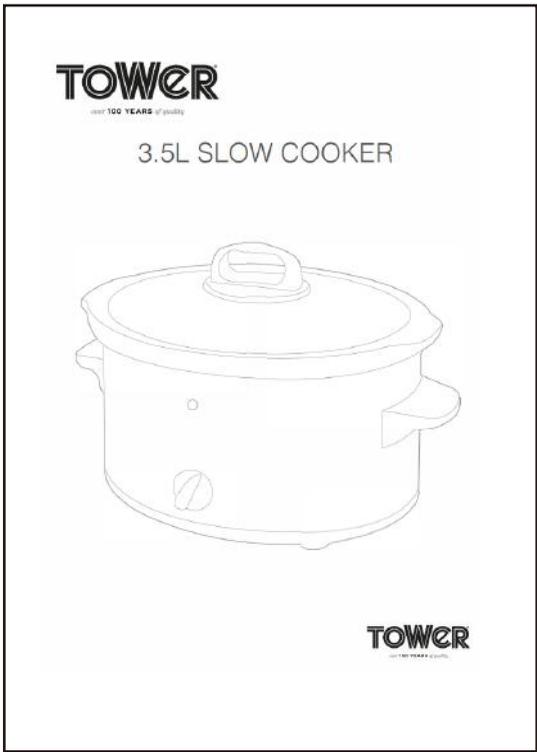

技术要求(版本号: A, 2017-01)

1. 该说明书的幅面大小为145*210mm
2. 印刷颜色为CMYK
3. 说明书印刷文件见后续页, 此页仅作为技术要求不印刷
4. 说明书上警告语部分首字母字体已调整高于3mm, 厂家印刷时必须保证高于3mm.
5. 装订方式为: 打钉

16161000A06865

				MD-THJ35 慢炖锅				RONSON-MD-THJ35 (R3LSCS16)-0501			
				说明书				材料: 双胶纸 100克			
标记	处数	更改文件号	签字	日期	图样标记	重量	比例				
制 图	容培旺	审 核	卢灿飞		K		1:1				
设 计		标准 化	古广君								
校 对		审 定	古广君								
会 签		日 期	20180423		共 1 页	第 1 页					


广东美的生活电器制造有限公司

1 2 3 4 5 6

TOWER®

over 100 YEARS of quality

3.5L SLOW COOKER

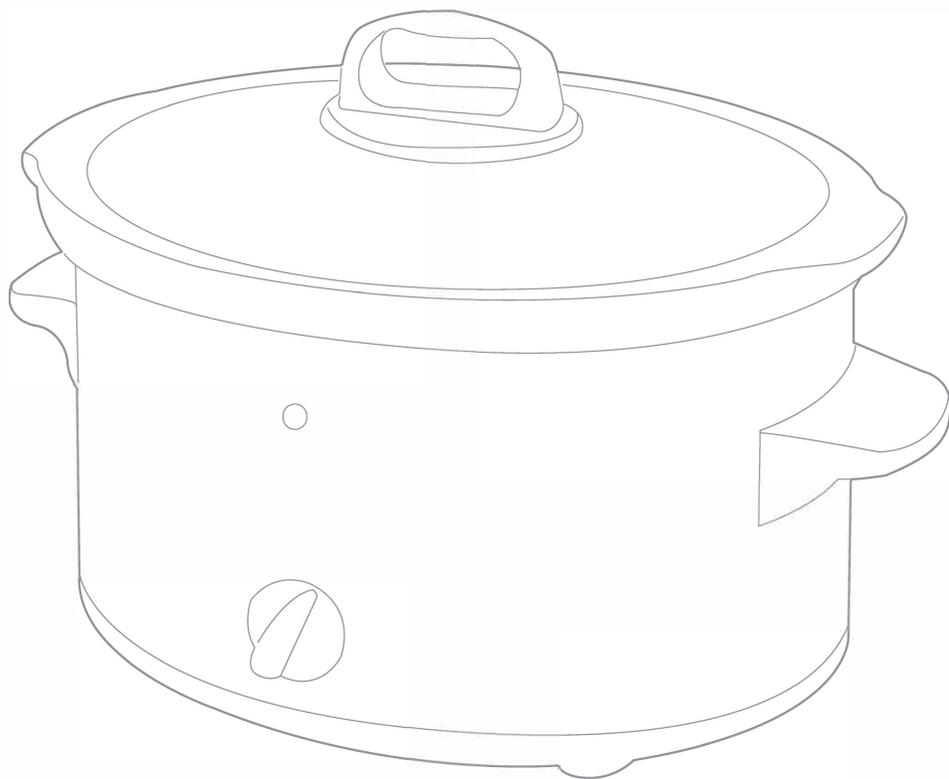

TOWER®

over 100 YEARS of quality

TOWER

over 100 YEARS of quality

1912 Midland Metal Spinners was founded by George Cadman, who was then 65 years old, as a metal holloware manufacturing company, in St. Mark's Street, Wolverhampton. They later moved into the Tower and Fort Works in Pelham Street, which ultimately gave rise to the famous Tower brand name.

1937 Tower exhibited some of their latest holloware designs at the British Industries Fair. As you can see from the original poster, their stand No. A410 must have been a great sight as it promoted their "Beautiful, inexpensive, untarnishable Plate, at prices all can afford to pay".



1961 Tower became one of the largest manufacturers of aluminium holloware, electric kettles, tea pots and other household articles with over 1,000 employees.

1974 Russell Hobbs took ownership of the expanding Tower brand.



Towerbrand

Your 3.5 Litre Slow Cooker

In The Box

Carefully remove your 3.5 Litre Slow Cooker from the box.

- Glass lid
- Removable Ceramic Pot
- Base Unit with Handle
- Instruction Manual

General Safety

- Ensure that you read all of the safety instructions before using this product.
- This product has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.
- Do read the operating instructions before you attempt to use the product.
- Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the instructions.
- Switch off and remove the mains plug or mains adapter when making or changing any connections.
- Do consult your dealer if you are ever in doubt about the installation, operation or safety of your product.
- Don't remove any fixed covers as this may expose you to dangerous voltages.
- Don't continue to operate the product if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off withdraw the plug from the mains and consult your dealer.
- There are no user serviceable parts in the product. When servicing, refer to qualified service personnel.
- Don't leave the product switched on when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has standby mode.
- Don't obstruct the ventilation vents on the product, for example with curtains or soft furnishings, as this may cause

overheating.

- Do not place the product in closed bookcases or racks without proper ventilation.
- Do not use the product in humid or damp conditions or allow it to be exposed to rain or moisture.
- Store the product in a clean, dry environment.
- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on it.
- Position the power cable and other connected cables so that they are not likely to be walked on, pinched or where items can be placed on or against them.
- Never allow children to insert foreign objects into holes or slots on the product.
- No naked flame sources, such as lighted candles, should be placed on the product.
- Disconnect the product from the mains supply before cleaning.
- Do not use any liquids or aerosol cleaners, as this may damage the product. Use a soft dust-free cloth.
- Contact local authorities for means of disposal.
- Make sure that other people in your household are conversant with operation of the product.

Product Safety

- This appliance is intended to be used in household and similar applications such as:
 - Farm houses:
 - By clients in hotels, motels and other residential type environments:
 - Bed and breakfast type environments.
- It is not suitable use in staff kitchen areas in shops, offices and other working environments.
- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply.
- For indoor use only.
- Do not use outdoors or near water.
- Place the appliance on a flat, stable, heat resistant surface, away from heat source and where it cannot be splashed by water.
- Keep the appliance and cord away from any hot gas, electric burner and heated oven.
- Allow adequate air space above and on all sides for air circulation.
- Do not use under cupboards or shelves.
- Do not use too close to curtains, draperies, walls, cupboards and other flammable materials.
- Do not touch hot surfaces during operation or before it cools. Use handles, knobs or oven gloves when removing lid.
- Extreme caution must be used when moving an appliance containing hot food, water or other hot liquids.
- To protect against the risk of electrical shock, do not put the base in water or in any other liquid.
- Do not switch the appliance on if it is empty.


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The mains lead should reach from the power socket without straining the connections.
- Do not let the cord hang over the edge of the worktop.
- Children should be supervised to ensure that they do not play with the appliance.
- Never allow children to operate the appliance.
- Unplug from the power socket when not in use, before putting on or taking off attachments, and before cleaning and maintenance.
- The use of attachments or tools not recommended by manufacturer may cause fire, electric shock or injury.
- Do not operate the appliance if it's damaged or malfunctions.
- Do not attempt repairs-the appliance contains no user-serviceable parts. Do not use the slow cooker other than for its intended use.
- Allow lid and ceramic pot to cool down first before cleaning.
- Do not subject the ceramic pot to sudden changes in temperature. Adding cold water to a very hot pot could cause it to crack.
- Do not allow the ceramic pot to stand in water for a long time (you can leave water in the pot to soak).
- Never cook directly in the base unit. Use the ceramic pot.
- Do not put the ceramic pot or glass lid in an oven, freezer, microwave or on a gas/electric hob.
- Do not use the ceramic pot or lid if cracked or chipped.
- The lid and ceramic pot are fragile. Handle with care.
- Do not leave the slow cooker connected to the socket outlet when not in use.

- Do not use the slow cooker to reheat food.
- Cleaning and user maintenance should not be made by children unless they are supervised.
- Keep the appliance and its cord out of reach of children.
- Lift the glass lid carefully to avoid scalding.
- The ceramic pot is designed for use with this appliance only.
- Do not immerse the main body, cord and plug in water or any other liquid.



CAUTION:
Hot Surface

Description Of Parts

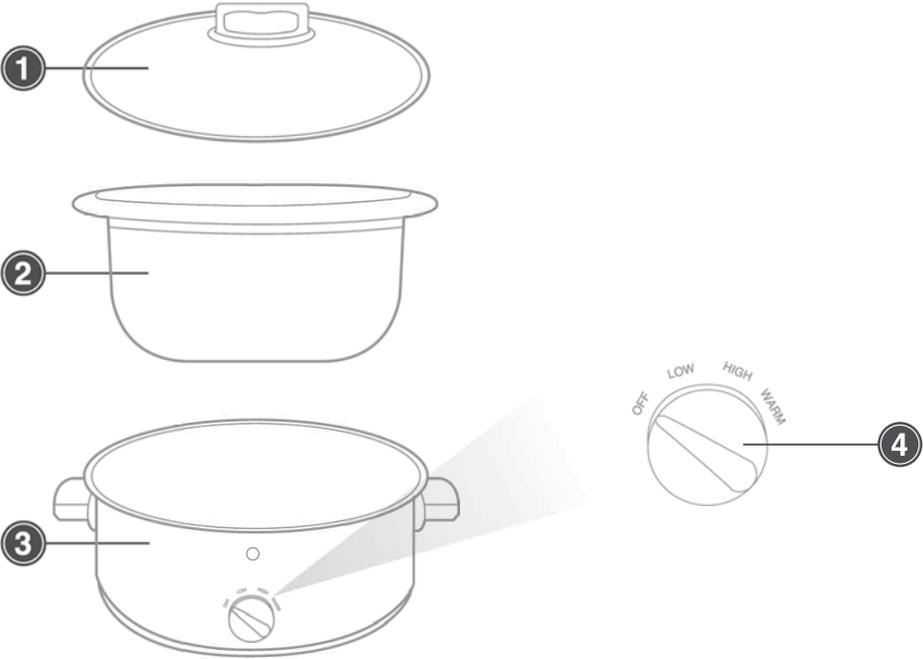

- ① Glass lid with handle
- ② Ceramic pot
- ③ Base unit
- ④ Control function

Using Your Slow Cooker

- Remove glass lid and ceramic pot and wash in hot soapy water and dry thoroughly.
- During initial use, the slow cooker may emit slight odour/smoke due to the burning off of the manufacturing residues. This is completely normal and will disappear after a few uses.
- Place food into the ceramic pot then cover with the glass lid. If you need to pre-cook or brown food prior to slow cooking, this must be done in a pan. Do not try to brown or pre-cook food in the slow cooker.
- Plug into a suitable power socket.
- Set the control function to low/high and cook for the recommended time given in the recipes.
- When food is ready, switch control function to off and unplug from power socket.
- If serving food from ceramic pot, place the ceramic pot on a heat resistant surface.

Cooking Guide

- The 3.5 litre slow cooker has a maximum working capacity of 2.5 litres. This allows 2cm space between the top of the ceramic pot and the food.
- The ceramic pot must be at least half full for best results.
- The slow cooker works by building up heat and maintaining an even temperature. To get the best results, don't remove lid unnecessarily as the built up heat will escape. Each time you remove the lid, allow an additional 10 minutes to the cooking time. The glass lid allows you to monitor the cooking progress without interrupting the cooking time.
- If cooking soups, leave a 5 cm space between the top of the ceramic pot and the food surface to allow simmering.
- The control function offers low and high setting for cooking. This allows you to adapt the cooking time to your convenience.

High Setting	If you wish to shorten the cooking period (4 – 6 hours)
Low Setting	If you wish to extend the cooking period (8 – 10 hours)
Warm Setting	This is not a cooking setting but allows you to keep food warm after cooking. You can set to 'warm' for a maximum of 4 hours.

About Slow Cooking

- Slow cooking has always been the best way to prepare a nutritious hot meal with minimum preparation and maximum free time away from the kitchen.
- Traditionally slow cooking was for soups and casseroles but with this slow cooker you can also produce most modern family meals and dinner party dishes. The ceramic pot is convenient as well as you can take straight to the table for serving. (Always place the ceramic pot on a heat proof mat or surface).
- Slow cooking is ideal for preparing tougher cuts of meat, giving them the long, gentle simmering that ensures that they become tender and full of flavour.
- Slow cooking retains moisture. If you wish to reduce moisture in the cooker, remove the lid after cooking and turn the control to high (if set to low) and simmer for 30 to 45 minutes.
- Many recipes demand all day cooking, if you do not have time to prepare food that morning, prepare it the night before and store the food in a covered container in the refrigerator. Transfer the food to the ceramic pot and add liquid/stock. In most recipes, the meat are browned first to improve their appearance and flavour.
- Some ingredients are not suitable for slow cooking – pasta, seafood, milk and cream should be added towards the end of the cooking time. Many things can affect how quickly a recipe will cook, water and fat content, initial temperature of the food and the size of the food.
- Vegetable usually takes longer to cook than meat, so try and arrange vegetables in the lower half of the pot.
- All food should be covered with liquid, gravy or sauce.
- Pre-brown meat and onions in a pan to seal in the juices. This is not necessary if the time is limited, but improves the flavour.

Cleaning and Maintenance

Before cleaning, switch off the slow cooker, unplug from power socket and allow it to cool completely.

- Clean the exterior surface of the slow cooker with a damp cloth and then polish with a soft dry cloth. Do not use steel wool pads or harsh/abrasive cleaners.
- Remove the glass lid and ceramic pot from the base unit and clean in hot soapy water or place ceramic pot in dishwasher.

Electrical information

(Fixed Mains Plug Only)

The mains lead supplied with this product is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be replaced with an appropriate plug.

If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions on the next page. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard.

If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions shown. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

Electrical Information (Power adapters only)

 
 
Never open the power adapter, you risk getting an electric shock.

Only use the power adapter that is supplied with your product.

You must always connect the power adapter to the product before connecting to the mains power supply.

The power adapter must be used indoors only, and must not be subjected to damp conditions.

The power adapter does not have any user serviceable parts.

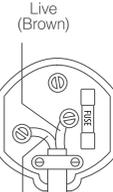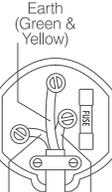2-core plug	Live (Brown)	3-core plug	Earth (Green & Yellow)
 <p>WARNING: Do not connect either wire to the earth terminal.</p>  <p>This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.</p> <p>The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.</p> <p>The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.</p>	 <p>Neutral (Blue)</p>	 <p>WARNING: This appliance must be earthed.</p>  <p>The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, or coloured green or green and yellow.</p> <p>The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.</p> <p>The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.</p>	 <p>Neutral (Blue)</p> <p>Live (Brown)</p>

Guarantee

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in the instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Tower has limited liability for incidental or consequential loss or damage.

This guarantee is valid in the UK and Eire only.

Technical Specification

Model Number	338842
Power Supply	220-240V~50Hz
Power	135 - 160W
Capacity	3.5 Litres



TOWER

over 100 YEARS of quality