


DAB FM RADIO

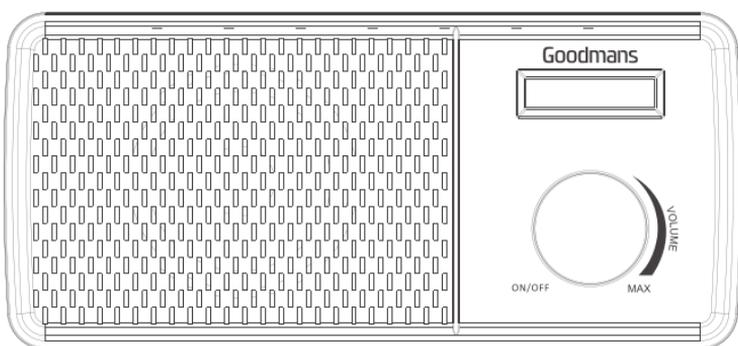

MODEL:338934

USER MANUAL



Goodmans

1 Welcome



2 Your DAB FM Radio

- 2.1 In The Box
- 2.2 Mains Power
- 2.3 Position Of DAB FM Radio
- 2.4 Adjusting The Aerial
- 2.5 Front View
- 2.6 Top View
- 2.7 Rear View

3 Quick Setup

- 3.1 Connecting The Power
- 3.2 Using Your DAB FM Radio For The First Time

4 Troubleshooting

DAB Operation

- 4.1 Full Scan
- 4.2 Storing Stations
- 4.3 Recalling A Stored Stations
- 4.4 Station Information On DAB Mode
- 4.5 Pruning

FM Operation

- 4.6 Auto Scan
- 4.7 Manual Scan
- 4.8 Storing Stations
- 4.9 Recalling A Stored Stations
- 4.10 Station Information On FM Mode

System Setting

- 4.11 Setting The Time/Date
- 4.12 Alarm Setting
- 4.13 Turn Off The Alarm
- 4.14 Turn Off The Alarm When Sounding
- 4.15 Sleep Setting
- 4.16 Factory Reset



- 4.17 System Version
- 4.18 FM Scan Set
- 4.19 Resetting the radio
- 4.20 Snooze Function

5 FM Scan Setting

- 5.1 System Version
-

6 Technical Specifications

7 Customer Support

1 Welcome



Thank you for choosing this Goodmans product. We have been making electrical products for the British people for over 90 years. Each of our products have been carefully designed to be great at what they do and this one is no exception. We hope you enjoy your new Goodmans DAB FM Radio.

2 Your DAB FM Radio

2.1 In the box

Carefully remove your DAB FM Radio from the box. Inside the box you will find:

- DAB FM Radio
- Quick Start Guide
- Guarantee and Safety Book
- Power Adapter
- User Manual

If any of these items are missing , please email:
Goodmans@bmstores.co.uk



2.2 Mains Power

Your DAB FM Radio uses a DC 5V - 1A power adapter. Please ensure that your mains supply is compatible before use.

2.3 Position of DAB FM Radio

Place on a flat, stable surface that is not subject to vibrations. Avoid the following locations:

- Where it is exposed to direct sunlight.
- Where it is close to heat radiating sources.
- Where the humidity is high and ventilation is poor.
- Where it is dusty.


2.4 Adjusting the Aerial

Fully extend the aerial to ensure good reception in both DAB and FM Radio modes. It may be necessary to alter the position of the DAB FM Radio and/or the aerial to achieve the best signal.




2.5 Front View

- Ⓐ LCD Display
- Ⓑ ON/OFF & Volume Control Dial
- Ⓒ Speaker

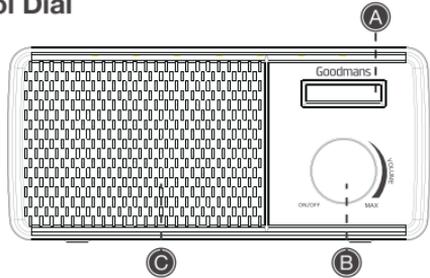

2.6 Top View

- Ⓓ **Standby/Mode Button**
Press and hold to enter Standby mode.
Press to switch between DAB and FM radio modes.
- Ⓔ **Scan Button**
Press to scan DAB and FM stations.
- Ⓕ **Info/Menu**
Press to view station information.
Press and hold to display menu options.
- Ⓖ **Prev**
To review station list(DAB) or Previous station(FM).
- Ⓗ **Next**
To review station list (DAB) or go to Next station(FM).
- Ⓘ **Preset**
Press and hold to save a station as a preset,
or press and release to recall a saved preset station.
- ⓵ **Enter/Snooze**
To confirm the selection, or Snooze the alarm when sounding.

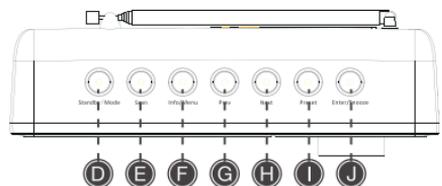




2.7 Rear View

- Ⓜ **DC 5V Micro USB port**
- Ⓚ **Antenna**
- Ⓛ **Battery compartment**

Insert 4 x 1.5V AA batteries into battery compartment(4 x 1.5V AA battery not included).

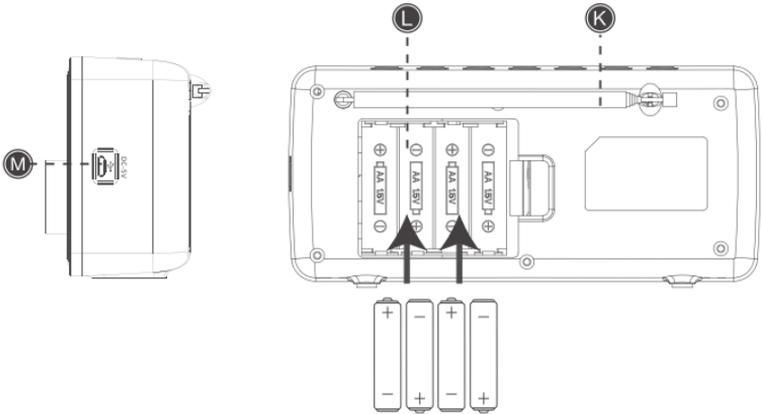

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

3 Quick Setup



3.1 Connecting The Power

1. Insert the power adapter to the 5V DC socket on your DAB FM Radio, or insert 4 x 1.5V AA batteries into battery compartment (4 x 1.5V AA battery not included).
2. Insert the power adapter into a suitable mains socket.
3. Press the Power/ Mode button on the top of your DAB FM Radio.

3.2 Using Your DAB FM Radio For The First Time:

1. Rotate the ON/OFF control clockwise to turn the radio on.
2. Extend the telescopic antenna for the best reception possible. Then press the Standby/Mode button to turn the radio on.
3. When DAB mode is activated for the first time, a full scan will automatically commence, or will play the last station before the unit was turned off.
4. Rotate the Volume control clockwise/anticlockwise to increase/ decrease the volume.
5. Once the radio has been switched ON, press the Standby/Mode button to switch between DAB and FM modes.
6. During scanning the screen will display a slide bar that indicates the progress of the scan, and the amount of radio stations that have been found so far. Once the scan has finished, the radio will select the first alphanumeric station.

Note: Hold the Standby/Mode button and unit will go to standby mode.

4 Operation



DAB Operation

4.1 Full Scan

To activate the full scan press the scan button. The unit will search for all available DAB stations.

4.2 Storing Stations

1. You can store up to 10 DAB stations to the memory presets for quick and easy recall of your favourite stations.
2. To store a preset, you must first be listening to the station that you would like to save. Press and hold the Preset button. The display will show "Preset Store<#:(Empty)>". If a station is already stored. The display will show "<#: Station name>".
3. Press the Prev/Next buttons to select the preset station number 1-10.
4. To save to the selected preset station number, press the Enter/Snooze button. The display will then show "Prest#stored".

4.3 Recalling A Stored Station

Once you have saved a station to one of the preset buttons, you can:

1. Press the Preset button and press the Prev/Next button to select your desired preset station number.
2. Press the Enter/Snooze button to recall a preset station number.

4.4 Station Information On DAB Mode

Press the Info/Menu button repeatedly to show the different programme information.

Signal Strength: Displays a signal bar with the strength of the current station.

Signal Error: Provides details of the signal error rate.

Channel and Frequency: Displays the station transmission channel number and frequency.

PTY(Programme Type): Shows the type and description of the programme by the DAB station.

Time and Date: Displays the time and date information provided by the broadcaster.

Bit Rate: The data rate of which the signal is being transmitted.

Dynamic Label Segment(DLS): Displays scrolling text information supplied by broadcaster.



4.5 Pruning

1. When the DAB FM radio has performed a Scan in several locations you may find there are stored stations that you can no longer receive. This function automatically removes them from the stored station list.
2. Press and hold the Info/Menu button to enter Prune, then press the Enter/Snooze to confirm and select YES to remove.

FM Operation

To switch the radio from DAB to FM mode, press the Stand by/ Mode button once.

4.6 Auto Scan

1. To search for a FM station, press the Scan button. This will start scanning up the frequency band.
2. To scan down the frequency band. Press and hold the Scan button.
3. Once a station has been found the scanning will stop automatically. If no stations are found then the tuning will stop once it has cycled through the entire FM band(87.5-108 MHz).

4.7 Manual Scan

To search FM stations manually, simply press the Prev/Next buttons repeatedly until your desired frequency is reached.

4.8 Storing Stations

1. You can store up to 10 FM stations to the memory presets for quick and easy recall of your favourite stations.
2. To store a preset, you must first be listening to the station that you would like to save. Press and hold the Preset button. The display will show "Preset store <#:(Empty)>". If a station is already stored, the display will show "<#: Station frequency>".
3. Press the Prev/Next button to select the preset station number 1-10.
4. To save to the selected preset station number, press the Enter/ Snooze button. The display will then show "Preset #stored".



4.9 Recalling A Stored Station

Once you saved a station to one of the preset buttons, you can:

1. Press the Preset button and press the Prev/Next buttons to select your desired preset station's number.
2. Press the Enter/Snooze button to recall a preset station number.

4.10 Station Information On FM Mode

Press the Info/Menu button repeatedly to show the different programme information.

Programme Type: Displays a description of the type of programme provided by the broadcaster.

Signal Strength: Displays a signal bar with the strength of the current station.

Time and Date: Displays the time and the date.

Frequency: Displays the station's transmission frequency.

Audio Type: Displays the audio type of the station you are listening to. It will either be Stereo or Mono.

Radio Text: Displays scrolling test information supplied by the broadcaster.

System Settings

With the unit turned on press and hold the Info/Menu button. This will open the "System Menu Settings". Press the Prev/Next buttons to select your desired Sub-option between:

4.11 Setting The Time/Date

1. Press the Enter/Snooze button, the hour digits will flash.
2. Press the Prev/Next buttons to set the hour correctly.
3. Press the Enter/Snooze button to confirm.
4. Repeat the last two steps to set the minutes, the Year, Month, Date.

4.12 Alarm Setting

1. Press the Enter/Snooze to use Alarm 1 or press next to access Alarm 2.
2. Press the Next button so the word "ON" is flashing and press Enter/Snooze to confirm.
3. The hour digits for the alarm will flash, press the Prev or Next to change the hour and press the Enter/Snooze button to confirm.



4. Press the Prev or Next button to change the minute and press the Enter/Snooze button to confirm.
5. Press the Prev or Next button to change the volume and press the Enter/Snooze button to confirm.
6. Press the Prev or Next button to change between Alarm-DAB-FM and press the Enter/Snooze to confirm.
7. To set the Alarm 2, follow the Alarm 1 instructions.

Note: You can press the Info/Menu button to get back last one step when in the process of setting the alarm.

4.13 Turn Off The Alarm

To turn off the alarm, press the Next button so the word “OFF” is flashing and press Enter/Snooze button. The alarm is now OFF.

4.14 Turn Off The Alarm When Sounding

Press the Standby/Mode button to turn off the alarm when sounding.

Note: The alarm will keep ringing for one hour if you do not turn it off when it is sounding.

4.15 Sleep Setting

1. Press the Prev or Next button to select either OFF-120-90-60-45-30-15-5 minutes.
2. Press the Enter/Snooze button to confirm your selection.

4.16 Factory Reset

1. Press the Enter/Snooze button and the display will show “Factory Reset?”. Press the Next or Prev to select “Yes”.
2. Press the Enter/Snooze button again and the radio will reset.



4.17 System Version

You can check the software version number.

4.18 FM Scan Set

Press the Enter/Snooze button to select Only or All. If select Only, the radio only scan the strong signal station and play. If select All, the radio will also scan the weak signal station and play.

4.19 Resetting The Radio

Resetting the radio will delete all the tuned DAB stations and all the preset memory stations in FM and DAB modes. To reset the radio:

1. Press and hold the Info/Menu button.
2. Press the Next button repeatedly until "Factory Reset" is displayed on the screen.
3. Press the Enter/Snooze button and the display will show "Factory Reset?". Press the Next button until the word "YES" is flashing.

4.20 Snooze Function

1. When the alarm sounds, press the Enter/Snooze button to delay the alarm for another 9 mins. The radio will go to Standby mode.
2. You can press Standby/Mode button to stop the Snooze function and go to the operation mode before the alarms rings.



Problem	What to do
No sound	The station is not tuned in. Fine tune the station. The volume is set to a low position. Increase the volume.
FM:Static sound DAB+:Burlbling/ intermittent cut-out	Signal reception is too low. Adjust the aerial or move the unit to a stronger signal location. Rescan stations.
Sound is distorted	The volume is too high. Adjust the volume control.
Desired station not found	Weak signal. Use the manual tune function.
Display shows "No Service"	There is no DAB+ coverage in your area, or poor reception. Adjust the position of the aerial, or move the until to a stronger signal location.
Display is blank	This may occur if the broadcaster changes the label of a service or removes a label while tuned. The unit will try to retune or perform a scan.

6 Technical Specifications



Model Numbel	338934
Power Supply	100 - 240V ~ 50/60Hz Adapter: DC 5V,1000mA 4 X 1.5V AA Batteries(not included)
Speaker Power	3W
Frequency Range	DAB 174---240MHz FM 87.5---108MHz
Pre-sets	FM mode: 10 DAB mode: 10
Dimensions	195mm(L) x 67.2mm(W) x 90mm(H)

7 Customer Support

For all product support, please email:
Goodmans@bmstores.co.uk

This product is intended for use within UK

Declaration of Conformance

The full text of the EU declaration is available at the following internet address:

<http://www.bmstores.co.uk/technical-information>